

Art.Nr.

5906174901 / 59061739969 / 59061739985 /

59061749969 / 59061739953

AusgabeNr.

5906174901_0106



Rev.Nr.







25/08/2026






HC65 / HC63 / HC63-13A

DE	Kompressor Originalbetriebsanleitung	6
GB	Compressor Translation of original instruction manual	21
FR	Compresseur Traduction de la notice originale	33
IT	Compressore La traduzione dal manuale di istruzioni originale	46
NL	Compressor Vertaling van de originele gebruikshandleiding	59
ES	Compresor Traducción del manual de instrucciones original	72
PT	Compressor Tradução do manual de operação original	85

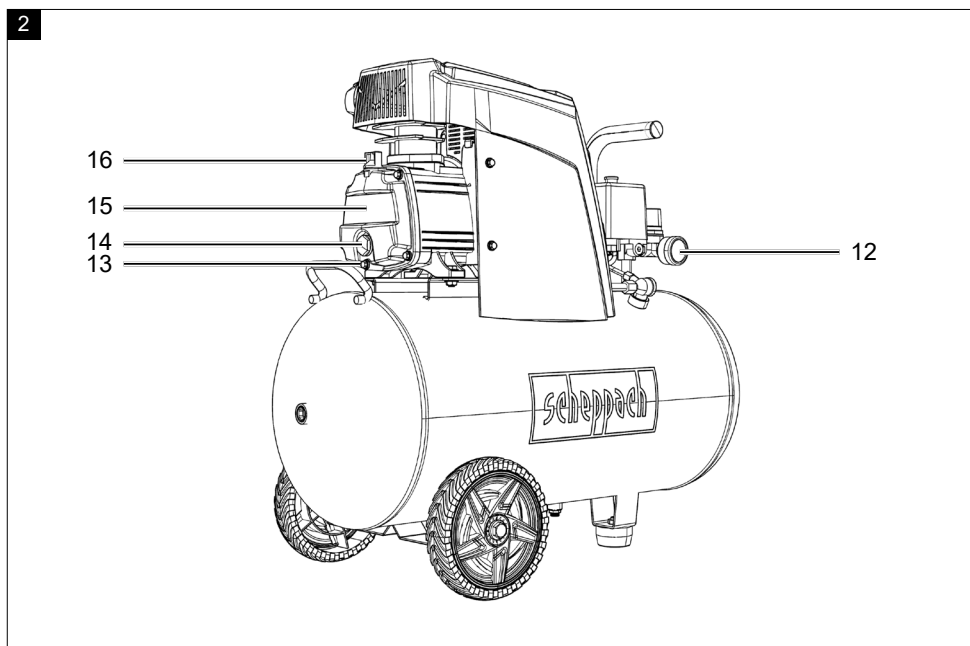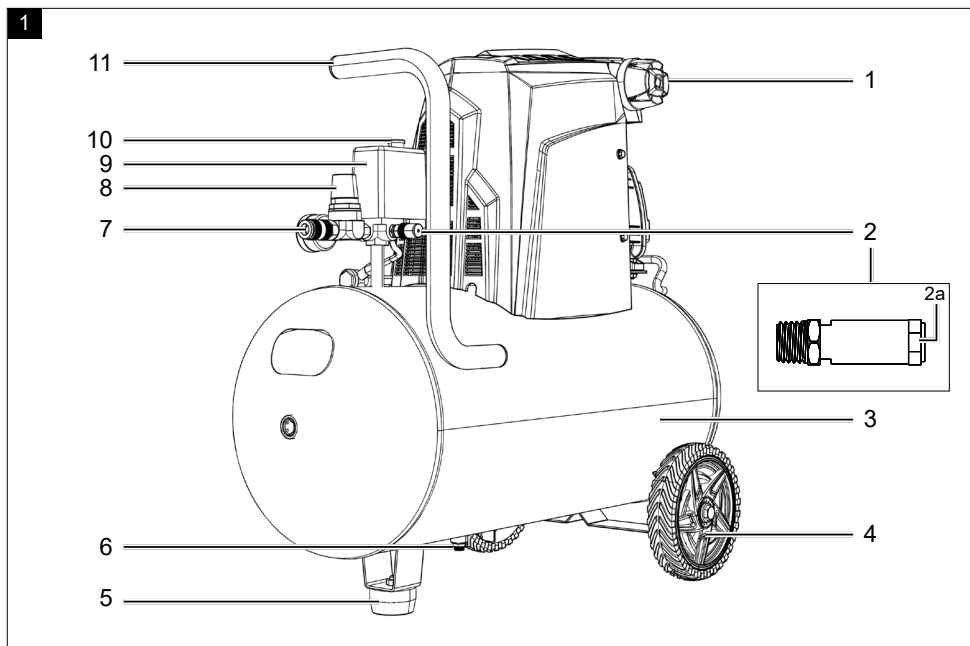

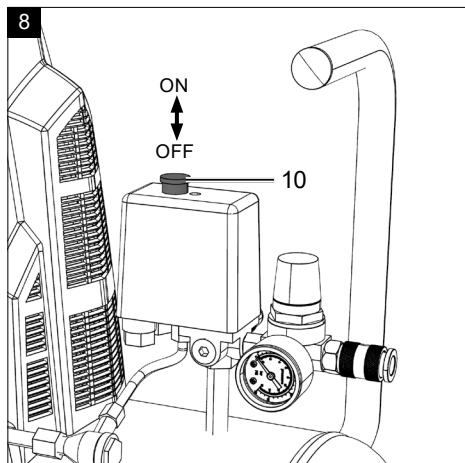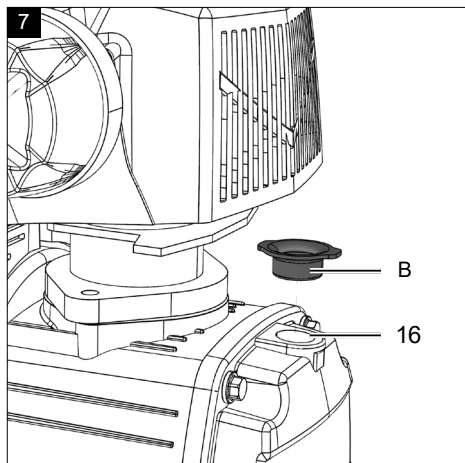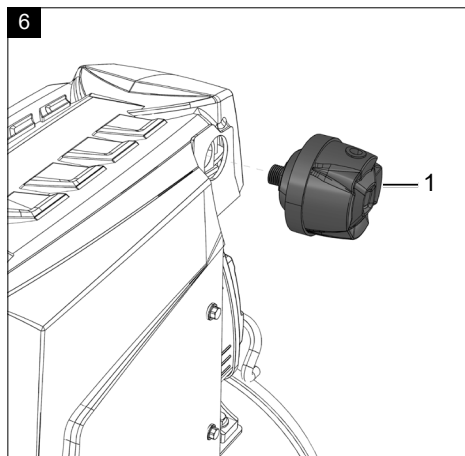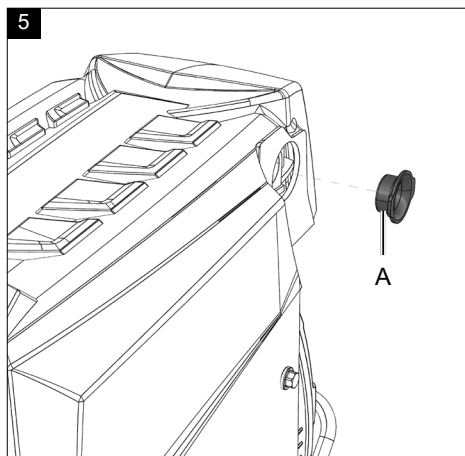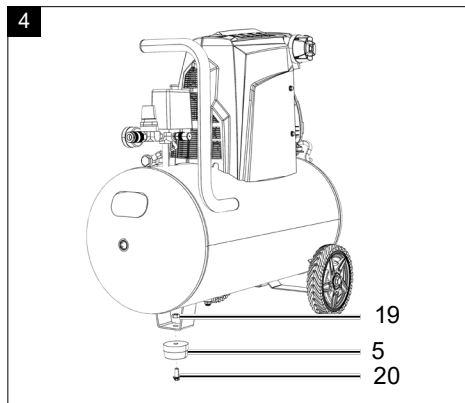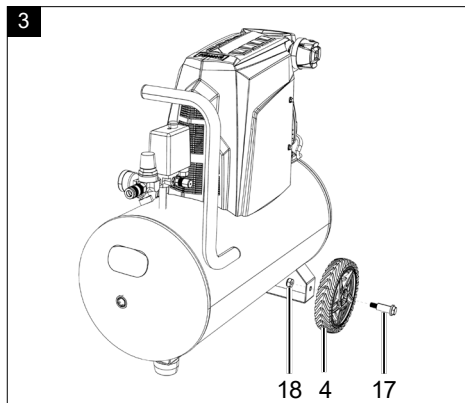

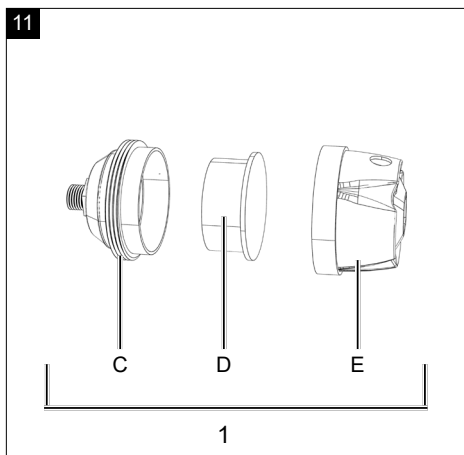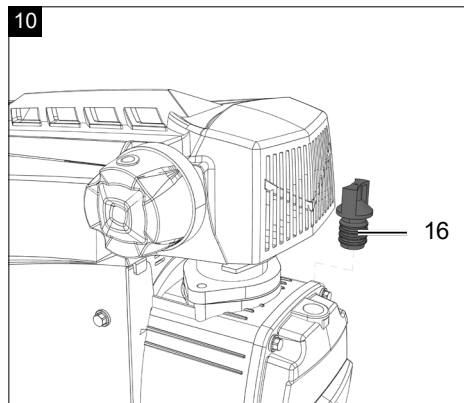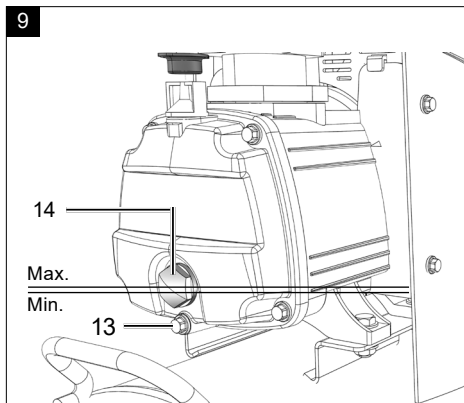

Explanation of the symbols on the product

Symbols are used in this manual to draw your attention to potential hazards. The safety symbols and the accompanying explanations must be fully understood. The warnings themselves will not rectify a hazard and cannot replace proper accident prevention measures.

	Warning - Read the operating manual to reduce the risk of injury.
	Wear hearing protection. Exposure to noise can cause hearing loss.
	Wear a dust protection mask. When machining wood and other materials, harmful dust may be generated. Do not machine material containing asbestos!
	Wear safety goggles. Sparks created during work or fragments, chippings and dust ejected by the device can cause sight loss.
	Warning against hot parts!
	Warning against electrical voltage!
	Warning! The equipment is remote-controlled and may start-up without warning.
	Attention! Prior to initial commissioning, check the oil level and replace the oil sealing plug!
	Fill with oil before first start-up. Remove the transport cap of the oil filling opening. Fill the compressor oil supplied into the compressor pump housing and fit the enclosed oil plug into the oil filling opening.
	Do not expose the machine to rain. The device may only be stationed, stored and operated in dry ambient conditions.
	Specification of the sound power level in dB.

	On/off switch.
	Pressure regulator.
	The product complies with the applicable European directives.
	The product complies with the applicable Serbian directives.

Explanation of the signal words in the operating manual

⚠ DANGER	Signal word to indicate an imminently hazardous situation which, if not avoided, will result in death or serious injury
⚠ WARNING	Signal word to indicate a potentially hazardous situation which, if not avoided, could result in death or serious injury
⚠ CAUTION	Signal word to indicate a potentially hazardous situation which, if not avoided, could result in minor or moderate injury
ATTENTION	Signal word to indicate a potentially hazardous situation which, if not avoided, could result in product or property damage

Table of contents:	Page:
1. Introduction	24
2. Proper use	24
3. Device description (fig. 1-4).....	24
4. Scope of delivery	24
5. Unpacking	25
6. Technical data.....	25
7. Safety instructions	25
8. Before commissioning	27
9. Assembly and operation.....	28
10. Electrical connection	28
11. Cleaning, maintenance and storage.....	29
12. Disposal and recycling.....	31
13. Troubleshooting	32
14. EU Declaration of Conformity (available online from 20/01/2027 – scan the QR code).....	98

1. Introduction

Manufacturer:

Scheppach GmbH
Günzburger Straße 69
D-89335 Ichenhausen

Note:

In accordance with the applicable product liability laws, the manufacturer of this product assumes no liability for damage to the product or caused by the product arising from:

- Improper handling
- Failure to comply with the operating manual
- Repairs carried out by third parties, unauthorised specialists
- Installing and replacing non-original spare parts
- Improper use
- Failures of the electrical system due to failure to observe the national electrical requirements and regulations

Note:

The operating manual is part of the product and contain important information for safe, proper and economical operation. Please also observe the applicable national regulations. Read all operating and safety instructions carefully before use and only use the product as described. Keep the manual and pass it on when you give the product to someone else.

2. Proper use

The compressor is used to generate compressed air for pneumatically powered tools that can be operated with an air rate of up to 127 l/min. (e.g. tyre inflators, air blow guns, paint spray guns).

The compressor may only be operated in a dry and well ventilated indoor space.

The product may only be used in the intended manner. Any use beyond this is improper. The user/operator, not the manufacturer, is responsible for damages or injuries of any type resulting from this.

An element of the intended use is also the observance of the safety instructions, as well as the assembly instructions and operating information in the operating manual.

Persons who operate and maintain the product must be familiar with the manual and must be informed about potential dangers.

The liability of the manufacturer and resulting damages are excluded in the event of modifications of the product. The product may only be operated with original parts and original accessories from the manufacturer. The safety, operating and maintenance specifications of the manufacturer, as well as the dimensions specified in the technical data, must be observed.

Please note that our products were not designed with the intention of use for commercial or industrial purposes. We assume no guarantee if the product is used in commercial or industrial applications, or for equivalent work.

The manufacturer is not liable for damage caused by improper use or incorrect operation.

3. Device description (fig. 1-4)

1. Air filter
2. Safety valve
- 2a. Drain nut
3. Pressure vessel
4. Wheel (2x)
5. Foot (2x)
6. Drain screw for condensate
7. Quick coupling (regulated compressed air)
8. Pressure regulator
9. Pressure switch
10. On/off switch
11. Transport handle
12. Pressure gauge (set pressure can be read off)
13. Oil drain screw
14. Oil sight glass
15. Compressor pump
16. Oil plug / oil filling opening
17. Nut (wheel)
18. Screw (wheel)
19. Nut (foot)
20. Screw (foot)

4. Scope of delivery

- 1x air filter
- 1x feet
- 2x wheels
- 1x assembly material
- 1x oil plug
- 1x oil bottle
- incl. 13-piece accessory set (for article number 59061749969 / 59061739953) (not shown)
- 1x operating manual

5. Unpacking

- Open the packaging and carefully remove the product.
- Remove the packaging material, as well as the packaging and transport safety devices (if present).
- Check whether the scope of delivery is complete.
- Check the product and accessory parts for transport damage. In the event of complaints the carrier must be informed immediately. Later claims will not be recognised.
- If possible, keep the packaging until the expiry of the warranty period.
- Familiarise yourself with the product by means of the operating manual before using for the first time.
- With accessories as well as wearing parts and replacement parts use only original parts. Spare parts can be obtained from your specialist dealer.
- When ordering please provide our article number as well as type and year of manufacture for the product.

⚠ WARNING!

The product and the packaging material are not children's toys! Do not let children play with plastic bags, films or small parts! There is a danger of choking or suffocating!

6. Technical data

Mains power connection	230 V~ / 50 Hz
Engine output	1500 W
Operating mode	S3* 50%
Compressor speed	2,850 rpm
Pressure vessel volume	50 l
Operating pressure	approx. 10 bar
Theo. Suction capability	approx. 220 l/min
Theo. Power output	approx. 127 l/min
Protection category	IP32
Device weight	approx. 27.15 kg
Oil (DAB46)	approx. 0.25 l
Max. installation altitude (above sea level)	1000 m

Subject to technical changes!

*Operating mode S3 (periodic intermediate duty)

The operation consists of a nominal load and standstill time. The cycle time is 10 min, the relative duty cycle is 50% of the cycle time.

The noise emission values have been determined in accordance with EN ISO 3744.

Wear hearing protection.

Exposure to noise can cause hearing loss.

⚠ Warning: Noise can have serious effects on your health. If the machine noise exceeds 85 dB, please wear suitable hearing protection.

Sound power level L_{WA}	97 dB
Sound pressure level L_{pA}	75 dB
Uncertainty $K_{WA/pA}$	2.41 dB

7. Safety instructions

⚠ Attention! The following basic safety measures must be observed when using power tools for protection against electric shock, and the risk of injury and fire. Read all these notices before using the power tool and store the safety instructions well for later reference.

⚠ Attention! The following basic safety measures must be observed when using this compressor for protection against electric shock, and the risk of injury and fire. Read and observe these instructions before using the device.

Safe work

1. Keep the work area orderly
 - Disorder in the work area can lead to accidents.
2. Take environmental influences into account
 - Do not expose power tools to rain.
 - Do not use electric tools in a damp or wet environment. There is a risk of electric shock!
 - Make sure that the work area is well-illuminated.
 - Do not use power tools where there is a risk of fire or explosion.
3. Protect yourself from electric shock
 - Avoid physical contact with earthed parts (e.g. pipes, radiators, electric ranges, cooling units).
4. Keep away from children!
 - Do not allow other persons to touch the tool and cable, keep them away from your work area.
5. Securely store unused power tools
 - Unused power tools should be stored in a dry, elevated or closed location out of the reach of children.
6. Do not overload your power tool
 - They work better and more safely in the specified output range.

7. Wear suitable clothing
 - Do not wear wide clothing or jewellery, which can become entangled in moving parts.
 - Rubber gloves and anti-slip footwear are recommended when working outdoors.
 - Tie long hair back in a hair net.
8. Do not use the cable for purposes for which it is not intended
 - Do not use the cable to pull the plug out of the outlet. Protect the cable from heat, oil and sharp edges.
9. Take care of your tools
 - Keep your compressor clean in order to work well and safely.
 - Follow the maintenance instructions.
 - Check the connection cable of the electric tool regularly and have it replaced by a recognised specialist when damaged.
 - Check extension cables regularly and replace them when damaged.
10. Pull the connector out of the socket
 - When the power tool is not in use or prior to maintenance and when replacing tools such as saw blades, drill bits, cutters.
11. Avoid inadvertent starting
 - Make sure that the switch is switched off when plugging the plug into an outlet.
12. Use extension cables for outdoors
 - Only use approved and appropriately identified extension cables for use outdoors.
 - Only use cable reels in the unrolled state.
13. Always remain attentive
 - Pay attention to what you are doing. Remain sensible when working. Do not use the power tool when you are distracted.
14. Check the power tool for potential damage
 - Protective devices or other parts with minor damage must be carefully inspected to ensure that they function correctly and as intended prior to continued use of the power tool.
 - Check whether the moving parts function faultlessly and do not jam or whether parts are damaged. All parts must be correctly mounted and all conditions must be fulfilled to ensure fault-free operation of the power tool.
 - Damaged protective devices and parts must be properly repaired or replaced by a recognised specialist workshop, insofar as nothing different is specified in the operating manual.
 - Damaged switches must be replaced at a customer service workshop.
 - Do not use any faulty or damaged connection cables.
- Do not use any power tool on which the switch cannot be switched on and off.
15. Have your power tool repaired by a qualified electrician
 - This power tool conforms to the applicable safety regulations. Repairs may only be performed by an electrician using original spare parts. Otherwise accidents can occur.
16. Attention!
 - For your own safety, only use accessories and additional equipment that are indicated in the operating manual or have been recommended or indicated by the manufacturer. Use of other tool attachments or accessories that those recommended in the operating manual or in the catalogue could represent a personal danger to you.
17. Noise
 - Wear hearing protection when using the compressor.
18. Replacing the connection line
 - If the connection line is damaged, it must be replaced by the manufacturer or an electrician to avoid danger. Danger due to electrical shocks!
19. Inflating tyres
 - Check the tyre pressure immediately after filling using a suitable pressure gauge, e.g. at a petrol station.
20. Street-legal compressors in construction site operation
 - Ensure that all hoses and fixtures are suitable for the maximum permissible working pressure of the compressor.
21. Set-up location
 - Only set up the compressor on a flat surface.
22. It is recommended to equip the feed hoses with a safety cable in case of pressure above 7 bar, e.g. using a wire cable.
23. Avoid over-stressing the piping system by using flexible hose connections to prevent kinking.
24. Make sure that the oil cooling devices are kept clean and that the protective devices are kept in good operating condition.
25. Risk of burns from hot oil
 - Wear suitable protective gloves.
 - Never work with the compressor near naked flames.
 - Be careful not to spill oil.
26. Starting the motor is forbidden if the temperature is below 0°C.
27. **Warning:** Clogged oil filters or valve failure lead to lack of lubrication.

⚠ WARNING! This power tool generates an electro-magnetic field during operation. This field can impair active or passive medical implants under certain circumstances. In order to prevent the risk of serious or deadly injuries, we recommend that persons with medical implants consult with their physician and the manufacturer of the medical implant prior to operating the power tool.

ADDITIONAL SAFETY INSTRUCTIONS

Observe the corresponding operating manuals of the respective compressed air tools / compressed air attachments! The following general instructions must also be observed:

Safety instructions for working with compressed air and air blow guns

- Ensure there is sufficient distance to the product, at least 2.50 m, and keep the compressed air tools / compressed air attachments away from the compressor during operation.
- Compressor pump and lines reach high temperatures during operation. Touching them will cause burns.
- The air which is sucked in by the compressor must be kept free of impurities that could cause fires or explosions in the compressor pump.
- When disconnecting the hose coupling, hold the coupling piece of the hose firmly with your hand.
- This will ensure that you avoid injuries caused by the hose recoiling.
- Wear safety goggles and a respirator when working with the compressed air pistol. Dusts are harmful to health! Foreign objects or blown off parts can easily cause injuries.
- Do not blow on people or clean clothing whilst on the body with the air blow gun. Danger of injury!

Safety instructions when using spraying attachments (e.g. paint sprayers):

- Keep the spray attachment away from the compressor when filling so that no liquid comes into contact with the compressor.
- Never spray in the direction of the compressor when using the spraying attachments (e.g. paint sprayers). Moisture can lead to electrical hazards!
- Do not process any paints or solvents with a flash point below 55° C. Risk of explosion!
- Do not heat up paints or solvents. Risk of explosion!
- If harmful liquids are processed, filter devices (face masks) are required for protection. Also observe the information on protective measures provided by the

manufacturers of such substances.

- The information and labelling of the hazardous substances ordinance affixed to the outer packaging of the processed materials must be observed. If necessary, take additional protective measures, in particular wear suitable clothing and masks.
- Do not smoke during the spraying process or in the working area. Risk of explosion! Paint vapours are also highly flammable.
- Fireplaces, naked flames lights or sparking machinery must not be present or operated.
- Do not store or consume food or drinks in the work area. Paint fumes are harmful to health.
- The working area must be larger than 30 m³ and sufficient air exchange must be ensured during spraying and drying.
- Do not spray into the wind. Always observe the regulations of the local police authorities when spraying flammable or hazardous spraying materials.
- Do not use media such as white spirit, butyl alcohol and methylene chloride in conjunction with the PVC pressure hose. These media destroy the pressure hose.
- The work area must be separated from the compressor so that it cannot come into direct contact with the working medium.

Operation of pressure vessels

- Anyone who operates a pressure vessel must keep this in good working order, operate and monitor it correctly, perform the necessary maintenance and servicing works immediately and implement safety measures as required according to the circumstances.
- The regulatory authority can instruct necessary monitoring measures in individual cases.
- A pressure vessel must not be operated if it exhibits a defect that poses a danger to personnel or third parties.
- Check the pressure vessel for rust and damage each time before use. The compressor shall not be operated if the pressure vessel is damaged or rusty. If you discover damage, please contact the customer service workshop.

Store the safety instructions safely.

8. Before commissioning

- Before connecting, make certain that the data on the type plate matches with the mains power data.
- Prior to initial commissioning, remove the transport plug (B) and fill the compressor pump housing with oil as described in item 9.4.

- Check the device for transport damage. Report any damage immediately to the transport company which was used to deliver the compressor.
- Install the compressor near the point of consumption.
- Long air lines and supply cables (extension cable) should be avoided.
- Ensure that the intake air is dry and dust-free.
- Do not deploy the compressor in damp or wet areas.
- Operate the compressor only in suitable areas (well ventilated, ambient temperature +5°C to 40°C). There must be no dust, acids, vapours, explosive gases or inflammable gases in the room.
- The compressor is designed to be used in dry rooms. It must not be used in areas where splashed water is present.
- The oil level in the compressor pump must be checked before commissioning.
- The compressor may only be used outdoor briefly when the ambient conditions are dry.
- The compressor must always be kept dry and must not be left outdoors after work is complete.

9. Assembly and operation

Attention!

Always make sure the device is fully assembled before commissioning!

You require the following for assembly:

- 2 x open-ended spanner, 13 mm and 17 mm (not included in the scope of delivery)

9.1 Fitting the wheels (fig. 3)

- Fit the wheels (4) provided as shown.

9.2 Mounting the foot (fig. 4)

- Fit the foot (5) provided as shown in.

9.3 Installing the air filter (fig. 5, 6)

- Remove the transport plug (A) and screw the air filter (1) to the device.

9.4 Replacing the transport lid (B) (fig. 7)

- Remove the transport cap (B) of the oil filling opening (16).
- Fill the compressor oil supplied into the compressor pump housing and fit the enclosed oil plug (16) into the oil filling opening (16).

9.5 Mains power connection

- The compressor is equipped with a mains cable with an earthed plug. This can be connected to any mains socket 230 V~ 50 Hz with an earth contact and that is protected at 16 A.
- Before commissioning, ensure that the mains voltage matches with the operating voltage and the machine's power rating on the type plate.
- Long supply lines, as well as extensions, cable drums etc. cause voltage drop and can prevent the motor from starting.
- At low temperatures below +5 °C, sluggishness may make starting difficult or impossible.

9.6 On/Off switch (fig. 8)

- Pull the On/off switch (10) upwards to switch on the compressor. Press the ON/OFF switch down to switch off.

9.7 Adjusting the pressure (fig. 1, 2)

- The pressure at the manometer (12) is adjusted with the pressure regulator (8).
- The pressure set can be drawn from the quick coupling (7).

9.8 Setting the pressure switch (fig. 1)

- The pressure switch (9) is set at the factory.
Cut-in pressure approx. 8 bar
Cut-out pressure approx. 10 bar

9.9 Thermal protector

The thermal protector is built into the device.

If the thermal protector has tripped, proceed as follows:

- Pull out the mains plug.
- Wait about two to three minutes.
- Plug the device in again.
- If the device does not start, repeat the process.
- If the device does not start again, switch the device off and on again using the on/off switch (10).
- If you have carried out all of the steps above and the device still does not work, contact our service team.

10. Electrical connection

The connection complies with the applicable national regulations.

Connections and repair work on the electrical equipment may only be carried out by electricians.

- Before commissioning, ensure that the mains voltage matches with the operating voltage on the type plate.

- When using extension cables, please follow the manufacturer's instructions.

When working with spray attachments and during temporary use outdoors, the device must be connected to a residual current circuit breaker with a trigger current of 30 mA or less.

10.1 Damaged electrical connection cable

The insulation on electrical connection cables is often damaged.

This may have the following causes:

- Pressure points, where connection cables are passed through windows or doors.
- Kinks where the connection cable has been improperly fastened or routed.
- Places where the connection cables have been cut due to being driven over.
- Insulation damage due to being ripped out of the wall socket.
- Cracks due to the insulation ageing.

Such damaged electrical connection cables must not be used and are life-threatening due to the insulation damage.

Check the electrical connection cables for damage regularly. Ensure that the connection cables are disconnected from electrical power when checking for damage.

Electrical connection cables must comply with national provisions. Only use connection cables of the same designation.

The printing of the type designation on the connection cable is mandatory.

10.2 Connection type

Safety information for replacing damaged or defective mains connection cables:

Connection type Y

If it is necessary to replace the mains connection cable, this must be done by the manufacturer or their representative to avoid safety hazards.

Please provide the following information in the event of any enquiries:

- Type of current for the motor
- Machine data - type plate
- Motor data - type plate

Important information

In the event of overloading, the motor will switch itself off. After a cool-down period (time varies) the motor can be switched back on again.

11. Cleaning, maintenance and storage

⚠ Attention!

Pull out the mains plug before carrying out any cleaning or maintenance work! Danger of injury due to electric shocks!

⚠ Attention!

Wait until the device has cooled down completely! Danger of burning!

⚠ Attention!

Depressurise the device before carrying out any cleaning or maintenance work! Danger of injury!

11.1 Cleaning

- Keep the device as free of dust and dirt as possible. Rub the device clean with a clean cloth or blow it off with compressed air at low pressure.
- We recommend that you clean the device directly after every use.
- Clean the device at regular intervals using a damp cloth and a little soft soap. Do not use any cleaning products or solvents; they could attack the plastic parts of the device. Make sure that no water can penetrate the device interior.
- The hose and injection tools must be disconnected from the compressor before cleaning. The compressor must not be cleaned with water, solvents or similar.

11.2 Maintaining the pressure vessel (fig. 1)

⚠ Attention!

To ensure a long service life for the pressure vessel (3), drain off the condensate after each use by opening the drain screw (6).

Release the boiler pressure beforehand (see 11.7.1).

The drain screw is opened by turning it anti-clockwise (when looking at the screw on the bottom of the compressor) so that the condensate can be completely drained out of the pressure vessel. Then close the drain screw again (turn clockwise). Check the pressure vessel for rust and damage each time before use.

The compressor shall not be operated if the pressure vessel is damaged or rusty. If you discover damage, please contact the customer service workshop.

⚠ Attention!

The condensate from the pressure vessel contains oil residue. Dispose of the condensate in an environmentally friendly manner at a suitable collection point.

11.3 Safety valve (2) (fig. 1)

- The safety valve is set to the maximum permissible pressure of the pressure vessel.
 - It is not permitted to adjust the safety valve or remove the connection lock between the exhaust nut and its cap.
 - Actuate the safety valve every 30 operating hours but at least three times a year to ensure that it works when required.
1. To open the outlet of the safety valve (2), turn the perforated drain nut (2a) anticlockwise. Now, the valve audibly releases air.
 2. Then, tighten the exhaust nut (2a) clockwise again.

Instructions on the disposal of condensate:

Dispose of the condensate in accordance with local and national environmental regulations. Ensure that it is not discharged into the wastewater system.

11.4 Check the oil level at regular intervals (fig. 9)

Place the compressor on a level and straight surface. The oil level must be positioned between the MAX and MIN of the oil sight glass (13).
Oil change: Recommended oil: DAB46 or equivalent.

The original oil filling must be changed after 10 operating hours; afterwards the oil must be drained and replaced with new oil after every 50 operating hours.

11.5 Changing oil (fig. 7, 10)

Switch the motor off and unplug the mains plug from the power outlet. Remove the oil plug (16). After releasing any air pressure, you can unscrew the oil drain screw (13) on the compressor pump (15).
To prevent the oil from running out in an uncontrolled manner, hold a small metal chute under the opening and collect the oil in a vessel. If the oil does not drain out completely, we recommend tilting the compressor slightly. Once the oil has fully drained out, replace the oil drain screw (13).
Dispose of the old oil at a drop-off point for old oil.

To fill in the correct quantity of oil, make sure that the compressor stands on an even surface. Fill new oil through the oil filling opening (16) until it comes up to

the maximum level. This is indicated by a red dot on the oil sight glass (14) (Fig. 9). Do not exceed the maximum filling quantity.

Overfilling the equipment may result in damage. Reinsert the oil sealing plug (16) into the oil filling opening (16).

Note:

Use the oil recommended by the manufacturer for your compressor. The oil should meet the specific requirements of the compressor. Incorrect or inferior oil can increase the risk of fire.

Note:

Regularly check for leaks in the compressor's oil system. Oil leaks can lead to an accumulation of flammable material and thus increase the risk of an oil fire. Repair leaks immediately and clean up spilled oil thoroughly.

11.6 Cleaning the intake filter (fig. 11)

The intake filter prevents dust and dirt being sucked in. It is necessary to clean this filter at least every 300 operating hours. A blocked intake filter significantly reduces the compressor power.

Remove the intake filter by unscrewing the screw. Then pull off the filter cover (E). You can now remove the air filter (D).

Carefully tap out the hose filter cover (E), air filter (D) and filter housing (C).

These components must then be blown out with compressed air (approx. 3 bar) and reassembled in reverse order.

11.7 Storage

⚠ Attention!

Disconnect the mains plug, vent the device and all connected compressed air tools. Store the compressor in such a way that it cannot be used by unauthorised persons.

⚠ Attention!

Store the compressor only in dry locations that are inaccessible for unauthorised persons. Do not tilt the unit, only store it upright! Oil may leak out!

11.7.1 Releasing excess pressure

Release overpressure in the compressor by switching off the compressor and using up the compressed air still in the pressure vessel, e.g. with a compressed air tool running at idle or with an air blow gun.

11.8 Service information

With this product, it is necessary to note that the following parts are subject to natural or usage-related wear, or that the following parts are required as consumables.

Wearing parts*: Air filter

* may not be included in the scope of delivery!

Spare parts and accessories can be obtained from our Service Centre. To do this, scan the QR code on the front page.

12. Disposal and recycling

Notes for packaging



The packaging materials are recyclable. Please dispose of packaging in an environmentally friendly manner.

Notes on the electrical and electronic equipment act (ElektroG)



Waste electrical and electronic equipment does not belong in household waste, but must be collected and disposed of separately!

- Used batteries or rechargeable batteries that are not installed permanently in the old device must be removed non-destructively before disposal! Their disposal is regulated by the battery act.
- Owners or users of electrical and electronic devices are legally obliged to return them after use.
- The end user is responsible for deleting their personal data from the old device being disposed of!
- The symbol of the crossed-out dustbin means that waste electrical and electronic equipment must not be disposed of with household waste.
- Waste electrical and electronic equipment can be handed in free of charge at the following places:
 - Public disposal or collection points (e.g. municipal works yards).
 - Points of sale of electrical devices (stationary and online), provided that dealers are obliged to take them back or offer to do so voluntarily.
 - Up to three waste electrical devices per type of device, with an edge length of no more than 25 centimetres, can be returned free of charge to the manufacturer without prior purchase of a new

device from the manufacturer or taken to another authorised collection point in your vicinity.

- Further supplementary take-back conditions of the manufacturers and distributors can be obtained from the respective customer service.
- If the manufacturer delivers a new electrical device to a private household, the manufacturer can arrange for the free collection of the old electrical device upon request from the end user. Please contact the manufacturer's customer service for this.
- These statements only apply to devices installed and sold in the countries of the European Union and which are subject to the European Directive 2012/19/EU. In countries outside the European Union, different regulations may apply to the disposal of waste electrical and electronic equipment.

You can find out how to dispose of the disused device from your local authority or city administration.

Fuels and oils

- Before disposing of the device, the fuel tank and the engine oil tank must be emptied!
- Fuel and engine oil do not belong in household waste or drains, but must be collected or disposed of separately!
- Empty oil and fuel tanks must be disposed of in an environmentally friendly manner.

13. Troubleshooting

The following table shows fault symptoms and describes remedial measures in the event of your machine failing to work properly. If you cannot localise and rectify the problem with this, please contact your service workshop.

Fault	Possible cause	Remedy
The compressor does not start.	Mains voltage not present.	Check cable, mains plug, fuse and socket.
	Mains voltage too low.	Avoid extension cables that are too long. Use extension cables with sufficient conductor cross-section.
	Outdoor temperature too low.	Do not operate at outside temperatures below +5°C.
	Motor is overheated.	Let the motor cool down, if necessary, eliminate the cause of overheating.
Compressor runs, but no pressure.	Safety valve (2) leaking.	Replace the safety valve (2).
	The seals are damaged.	Check the seals and have any damaged seals replaced by a service centre.
	Drain screw for condensate (6) leaking.	Tighten the screw by hand. Check the seal on the screw and replace if necessary.
Compressor running, pressure shown on the manometer, but tools are not running.	Hose connections leaking.	Check compressed air hose and tools, replace if necessary.
	Quick-coupler leaking.	Check quick coupling, replace if necessary.
	Pressure set too low at pressure regulator (8).	Turn up the pressure regulator further.

Scheppach GmbH, Günzburger Str. 69, 89335 Ichenhausen

DE	EU-Konformitätserklärung (gültig bis einschließlich 19.01.2027) Originalkonformitätserklärung		Der hier beschriebene Gegenstand der Erklärung erfüllt die Vorschriften der Richtlinie 2011/65/EU des Europäischen Parlaments und des Rates vom 8. Juni 2011 zur Beschränkung der Verwendung bestimmter gefährlicher Stoffe in Elektro- und Elektronikgeräten. *
	Wir erklären in alleiniger Verantwortung, dass das hier beschriebene Produkt mit den geltenden Richtlinien und Normen übereinstimmt.		Technische Unterlagen verfügbar bei: **
	Artikelnummer***	Artikelbezeichnung: Kompressor HC65 / HC63 / HC63-13A	Marke****
GB	EU Declaration of Conformity (valid until 19.01.2027) Translation of the original Declaration of Conformity		The object of the declaration described here fulfils the regulations of the directive 2011/65/EU of the European Parliament and Council from 8th June 2011, on the restriction of the use of certain hazardous substances in electrical and electronic equipment. *
	We declare under our sole responsibility that the product described here complies with the applicable directives and standards.		Technical documentation available at: **
	Item number***	Item designation: Kompressor HC65 / HC63 / HC63-13A	Brand****
FR	Déclaration de conformité UE (valable jusqu'au 19/01/2027 compris) Traduction de la déclaration de conformité originale		L'appareil décrit ci-dessus dans la déclaration est conforme aux réglementations de la directive 2011/65/UE du Parlement Européen et du Conseil du 8 juin 2011 visant à limiter l'utilisation de substances dangereuses dans la fabrication des appareils électriques et électroniques. *
	Nous déclarons, sous notre propre responsabilité, que le produit décrit ici est conforme aux directives et normes en vigueur.		Dossier technique auprès de: **
	Référence ***	Désignation de l'article: Compresseur HC65 / HC63 / HC63-13A	Marque ****
IT	Dichiarazione di conformità UE (Valida fino al 19.01.2027 compreso) Traduzione della dichiarazione di conformità originale		L'oggetto della dichiarazione, qui descritto, soddisfa le disposizioni della Direttiva 2011/65/UE del Parlamento Europeo e del Consiglio dell'8 giugno 2011, sulla restrizione nell'utilizzo di determinate sostanze pericolose negli apparecchi elettrici ed elettronici. *
	Dichiariamo sotto la nostra esclusiva responsabilità che il prodotto qui descritto è conforme alle direttive e alle norme vigenti.		Documentazione tecnica disponibile presso: **
	Gaminio numeris ***	Nome articolo: Compresore HC65 / HC63 / HC63-13A	Marchio ****
NL	EU-conformiteitsverklaring (geldig tot en met 19-01-2027) Vertaling van de originele conformiteitsverklaring		Het hier beschreven onderwerp van deze verklaring voldoet aan de voorschriften van richtlijn 2011/65/EU van het Europese Parlement en de Raad van 8 juni 2011 omtrent de beperking van het gebruik van bepaalde gevaarlijke stoffen in elektrische en elektronische apparaten. *
	Wij verklaren onder eigen verantwoordelijkheid dat het hier beschreven product voldoet aan de geldende richtlijnen en normen.		Technische documentatie verkrijgbaar bij: **
	Artikelnummer ***	Artikelnnaam: Compressor HC65 / HC63 / HC63-13A	Merk ****
ES	Declaración de conformidad UE (válido hasta el 19.01.2027 incluido) Traducción de la Declaración de conformidad original		El objeto de la declaración aquí descrito cumple las disposiciones de la Directiva 2011/65/UE del Parlamento Europeo y el Consejo del 8 de junio de 2011 sobre restricciones a la utilización de determinadas sustancias peligrosas en aparatos eléctricos y electrónicos. *
	Declaramos, bajo nuestra exclusiva responsabilidad, que el producto aquí descrito cumple las directivas y normas aplicables.		Documentación técnica disponible en: **
	Núm. de artículo***	Denominación del artículo: Compresor HC65 / HC63 / HC63-13A	Marca****
PT	Declaração de conformidade UE (válida até ao fim de 19.01.2027) Tradução da declaração de conformidade original		O objeto da declaração aqui descrito cumpre com as normas da Diretiva 2011/65/UE do Parlamento Europeu e do Conselho de 8 de junho de 2011 relativamente à restrição da utilização de determinadas substâncias perigosas em equipamentos elétricos e eletrônicos. *
	Declarámos, à nossa exclusiva responsabilidade, que o produto aqui descrito está em conformidade com as diretivas e normas aplicáveis.		Documentos técnicos disponíveis junto de: **
	Número de artigo***	Designação do artigo: Compressor HC65 / HC63 / HC63-13A	Marca****
CZ	EU prohlášení o shodě (platné do 19.01.2027 včetně) Překlad originálního prohlášení o shodě		Zde popsaný předmět prohlášení splňuje předpisy směrnice 2011/65/EU Evropského parlamentu a Rady ze dne 8. června 2011 pro omezení používání určitých nebezpečných látek v elektrických a elektronických zařízeních. *
	Prohlašujeme na svou výlučnou odpovědnost, že zde popsaný výrobek odpovídá platným směrnicím a normám.		Technické podklady k dispozici u: **
	Číslo výrobku***	Název výrobku: Kompresor HC65 / HC63 / HC63-13A	Značka****
SK	EÚ vyhlásenie o zhode (Platné do 19.01.2027 vrátane) Preklad originálneho vyhlásenia o zhode		Tu opísaný predmet vyhlásenia je v súlade s predpismi smernice Európskeho parlamentu a Rady 2011/65/EU z 8. júna 2011 o obmedzení používania určitých nebezpečných látok v elektrických a elektronických zariadeniach. *
	Na vlastnú zodpovednosť vyhlasujeme, že tu popísaný výrobok je v súlade s platnými smernicami a normami.		Technické podklady sú k dispozícii na: **
	Číslo výrobku ***	Označenie výrobku: Kompresor HC65 / HC63 / HC63-13A	Značka ****

HU	EU megfeleléségi nyilatkozat (2027.01.19-i hatállyal bezárólag érvényes) Az eredeti megfeleléségi nyilatkozat fordítása Saját kizárólagos felelősségünkre kijelentjük, hogy az itt ismertetett termék megfelel az érvényes irányelveknek és szabványoknak. Cikkszám ***	A nyilatkozati írt megnevezett tárgya teljesíti az Európai Parlament és Tanács 2011. június 8-i, egyes veszélyes anyagok elektromos és elektronikus berendezésekben való alkalmazásának korlátozásáról szóló 2011/65/EU irányelvnek előírásait. * A műszaki dokumentáció elérhető: ** Márka ****
PL	Deklaracja zgodności UE (obowiązuje do 19.01.2027 włącznie) Tłumaczenie oryginalnej deklaracji zgodności Oświadczamy na własną odpowiedzialność, że opisany tutaj produkt jest zgodny z obowiązującymi dyrektywami i normami. Numer artykułu ***	Wymieniony powyżej przedmiot niniejszej deklaracji jest zgodny z wymogami dyrektywy 2011/65/UE Parlamentu Europejskiego i Rady z 8 czerwca 2011 r. w sprawie ograniczenia stosowania niektórych niebezpiecznych substancji w sprzęcie elektrycznym i elektronicznym. * Dokumentacja techniczna dostępna na stronie: ** Marka ****
HR	EU izjava o sukladnosti (vrijedi do uključujući 19.01.2027.) Prijevod originalne izjave o sukladnosti Na svoju odgovornost izjavljujemo da je ovdje opisan proizvod usklađen s važećim direktivama i normama. Broj artikla ***	Ovdje opisani predmet Izjave ispunjava propise Direktive 2011/65/EU Europskog parlamenta i Vijeća od 8. lipnja 2011. o ograničenju uporabe određenih opasnih tvari u električnoj i elektroničkoj opremi. * Tehnička dokumentacija dostupna je na: ** Marka ****
SI	EU izjava o skladnosti (veljavna do vključno 19.01.2027) Prevod originalne izjave o skladnosti S polno odgovornostjo izjavljamo, da je tukaj opisani izdelek v skladu z veljavnimi smernicami in standardi. Številka izdelka ***	Tukaj opisani predmet izjave izpolnjuje predpise Direktive 2011/65/EU Evropskega parlamenta in Sveta z dne 8. junij 2011 za omejevanje uporabe določenih nevarnih snovi v električnih in elektronskih napravah. * Tehnični dokumenti so na voljo pri: ** Znamka ****
EE	EL vastavusdeklaratsioon (Kehtib kuni 19.01.2027) Vastavusdeklaratsiooni originaali tõlge Me deklareerime ainuiskuliselt vastutades, et siin kirjeldatud toode ühtib esitatud direktiivide ja normidega. Artiklinumber ***	Deklaratsiooni objektiks olev siin kirjeldatud ese vastab Euroopa Parlamendi ja nõukogu direktiivile 2011/65/EU kuupäevaga 8. juuni 2011 teatud ohtlike ainete kasutamispilanguga kohta elektri- ja elektroonikaseadmetes. * Tehnilised dokumendid on saadaval: ** Kaubamärk ****
LT	EB atitikties deklaracija (galioja iki 2027-01-19 įskaitytinai) Atitikties deklaracijos originalo vertimas Prisiimdami išskirtinę atsakomybę deklaruojame, kad čia aprašytas gaminytis atitinka galiojančias direktyvas ir standartus. Gaminio numeris ***	Čia aprašytas deklaracijos objektas atitinka 2011 m. birželio 8 d. Europos Parlamento ir Tarybos direktyvos 2011/65/ES dėl tam tikrų pavojingų medžiagų naudojimo elektros ir elektroninėje įrangoje apribojimo reikalavimus. * Techinius dokumentus galima gauti iš: ** Prekės ženklas ****
LV	ES atbilstības deklarācija (spēkā līdz 19.01.2027., ieskaitot) Oriģinālās atbilstības deklarācijas tulkojums Mēs, uzņemoties pilnu atbildību, paziņojam, ka šeit aprakstītais ražojums atbilst spēkā esošajām direktīvām un standartiem. Preces numurs ***	Šeit aprakstītais deklarācijas priekšmets atbilst Eiropas Parlamenta un Eiropas Padomes 2011. gada 8. jūnija Direktīvas 2011/65/ES noteikumiem par noteiktu bīstamo vielu izmantošanas ierobežošanu elektriskajās un elektroniskajās ierīcēs. * Tehniskā lieta ir pieejama pie: ** Prečizīme ****
SE	EU-försäkrän om överensstämmelse (giltig till och med 19 januari 2027) Översättning från försäkrän om överensstämmelse i original Vi förklarar under eget ansvar att produkten som beskrivs här överensstämmer med gällande riktlinjer och standarder. Artikelnummer ***	Föremålet för försäkrän som beskrivs här överensstämmer med bestämmelserna i Europaparlamentets och rådets direktiv 2011/65/EU av den 8 juni 2011 om begränsning av användningen av vissa farliga ämnen i elektriska och elektroniska produkter. * Teknisk dokumentation tillgänglig hos: ** Märke ****
FI	EU-vaatimusten mukaisuusvakuutus (voimassa 19.01.2027 asti) Alkuperäisen vaatimusten mukaisuusvakuutuksen käännös Vakuutamme omalla vastuullamme, että tässä kuvattu tuote täyttää voimassa olevien direktiivien ja standardien määräykset. Tuotenumro ***	Tässä kuvattu vakuutuksen kohde täyttää tiettyjen vaarallisten aineiden käytön rajoittamisesta sähkö- ja elektroniikkalaitteissa 8. kesäkuuta 2011 annetun Euroopan parlamentin ja neuvoston direktiivin 2011/65/EU määräykset. * Tekniset asiakirjat saatavana: ** Merkki ****

DK	EU-overensstemmelseserklæring (Gælder til og med 19.01.2027) Oversættelse af den originale overensstemmelseserklæring		Genstanden for den her beskrevne erklæring overholder bestemmelserne i Europa-Parlamentets og Rådets direktiv 2011/65/EU af 8. juni 2011 vedr. begrænsning af brugen af visse farlige stoffer i elektrisk og elektronisk udstyr. * Tekniske dokumenter findes på: **
	Vi erklærer under eget ansvar, at det her beskrevne produkt overholder de gældende direktiver og standarder. Artikelnummer ***	Art.-betegnelse: Kompressor HC65 / HC63 / HC63-13A	Mærke ****
NO	EU-samsvarserklæring (gyldig til og med 19.01.2027) Oversættelse av den opprinnelige samsvarserklæringen		Gjenstand for erklæringen beskrevet her oppfyller forskriftene til direktiv 2011/65/EU fra Europa-Parlamentet og Rådet av 8. juni 2011 om begrensning av bruken av bestemte farlige stoffer i elektronikk og elektronisk utstyr. * Tekniske dokumenter tilgjengelig hos: **
	Vi erklærer med eneansvar at produktet som er beskrevet her er i samsvar med gjeldende direktiver og standarder. Artikelnummer ***	Art.betegnelse: Kompressor HC65 / HC63 / HC63-13A	Merke ****
BG	ЕС Декларация за съответствие (валидна включително до 19.01.2027) Превод на оригиналната декларация на съответствие		Описаният предмет в декларацията отговаря на разпоредбите на Директива 2011/65/ЕС на Европейския парламент и на Съвета от 8 юни 2011 г. относно ограничението на употребата на определени опасни вещества в електрическото и електронното оборудване. * Техническата документация се предоставя от: **
	Ние декларираме на своя отговорност, че описаният тук продукт отговаря на приложимите директиви и стандарти. Каталоген номер ***	Обозначение на артикула: Компресор HC65 / HC63 / HC63-13A	Марка ****
GR	Δήλωση συμμόρφωσης ΕΕ (ισχύει έως και τις 19.01.2027) Μετάφραση από το πρωτότυπο της δήλωσης συμμόρφωσης		Το αντικείμενο της παρούσας δήλωσης, το οποίο περιγράφεται εδώ, εκπληρώνει τις διατάξεις της Οδηγίας 2011/65/ΕΕ του Ευρωπαϊκού Κοινοβουλίου και του Συμβουλίου της 8ης Ιουνίου 2011 σχετικά με τον περιορισμό της χρήσης ορισμένων επικίνδυνων ουσιών σε ηλεκτρικό και ηλεκτρονικό εξοπλισμό. * Ο τεχνικός φάκελος είναι διαθέσιμος στη θέση: **
	Δηλώνουμε με αποκλειστική μας ευθύνη ότι το προϊόν που περιγράφεται στο παρόν βρίσκεται σε συμμόρφωση με τις ισχύουσες Οδηγίες και Πρότυπα. Αριθμός είδους ***	Ονομασία είδ.: Συμπιεστής HC65 / HC63 / HC63-13A	Μάρκα ****
RO	Declarație de conformitate UE (valabilă până la 19.01.2027 inclusiv) Traducere a declarației de conformitate originale		Obiectul declarației descris aici îndeplinește prescripțiile directivei 2011/65/UE a Parlamentului European și a Consiliului din 8 Iunie 2011 asupra limitării utilizării anumitor substanțe periculoase în aparatele electrice și electronice. * Documentația tehnică disponibilă la: **
	Declarăm pe proprie răspundere că produsul descris aici coincide cu directivele și normele în vigoare. Număr articol ***	Notație art.: Compresor HC65 / HC63 / HC63-13A	Marcă ****
RS	EU izjava o usaglašenosti (važi do uključujući 19.01.2027) Prevod originalne izjave o usklađenosti		Ovde opisani predmet ove izjave ispunjava odredbe Direktive 2011/65/EU Evropskog parlamenta i Saveta od 8. juna 2011. godine o ograničenju upotrebe određenih opasnih materija u električnoj i elektronskoj opremi. * Tehnička dokumentacija dostupna kod: **
	Izjavljujemo na našu isključivu odgovornost da je ovde opisani proizvod usklađen sa primenljivim smernicama i standardima. Broj artikla ***	Oznaka proizvoda: Kompresor HC65 / HC63 / HC63-13A	Brend ****
TR	AB uygunluk beyanı (19.01.2027 tarihi dahil olmak üzere geçerlidir) Orijinal uygunluk beyanının çevirisi		İşbu uygunluk beyanının düzenlendiği burada adı geçen ürün, Avrupa Parlamentosu'nun ve 8 Haziran 2011 tarihli Konsey'in elektrik ve elektronik cihazlarda belirli tehlikeli maddelerin sınırlandırılmasına ilişkin 2011/65/AT sayılı direktifini yerine getirmektedir. * Teknik belgeler şurada mevcuttur: **
	Burada açıklanan ürünün geçerli yönetmeliklere ve standartlara uygun olduğunu tamamen kendi sorumluluğumuz altında beyan ediyoruz. Ürün numarası ***	Ürün Tanım: Kompresör HC65 / HC63 / HC63-13A	Marka ****
*** 5906174901 SERIENNUMMERN: 26854 - 46854 5906173969 SERIENNUMMERN: 03999 - 23999 5906173985 SERIENNUMMERN: 03826 - 23826 5906174969 SERIENNUMMERN: 03069 - 23069 5906173963 SERIENNUMMERN: 01001 - 21001			**** SCHEPPACH

** : Georg Kohler Günzburger Str. 69 D-89335 Ichenhausen <i>i. V. Andreas Pöcher</i> i. V. Andreas Pöcher / Head of Project Management <i>i. V. Simon Schunk</i> i. V. Simon Schunk / Division Manager Product Center	☒ 2011/65/EU* + (EU) 2015/863 ☒ 2014/30/EU ☒ 2014/29/EU ☐ 2014/35/EU ☐ 2004/22/EG ☒ 2014/68/EU ☐ 89/686/EWG_96/58/EG ☐ 90/396/EWG ☐ 2023/826/EU	☒ 2006/42/EG ☐ Annex IV Notified Body: Notified Body No.: Certificate No.:	☒ 2000/14/EG_2005/88/EG Noise: measured L_{WA} = 95 dB guaranteed L_{WA} = 97 dB ☐ Annex V ☒ Annex VI Notified Body: TÜV SÜD Industrie Service GmbH Westendstrasse 199 80686 München Deutschland Notified Body No.: 0036
☐ 2016/1628/EU Emission No.:			
EN 60204-1:2018; EN 1012-1:2010; EN IEC 61000-6-3:2021; EN IEC 61000-6-1:2019			

Ichenhausen, 24.08.2026

